



## 6P DOUBLE FLEX

### Installation Instructions for 6P-A1C six bolt Composite Disc Couplings

#### 1. Tools Required:

- Torque wrench with hex sockets for clamp hub socket head cap screws.
- Laser alignment tool or dial indicator (recommended). If not available a straight edge and feeler gauges.
- Caliper

2. These instructions are for standard series couplings with normal running conditions. Special couplings may have different instructions or drawings.

3. When initially mounting the coupling, the misalignment may be one and one half times the maximum permissible misalignment shown in the catalog. Inspect hub bores, shafts, and keyways making sure there are no burrs. Clean hub bores and shafts. Standard CD coupling hubs are supplied with slight clearance fit (see catalog).

4. Install the coupling onto the shafts. It is recommended that the ends of both shafts be flush with the end of each hub. At the minimum each shaft should extend past the hub clamp slot and extend into one third of the hub flange (non-slotted) area. If the shaft extends past the hub face verify there is enough clearance between shaft and disc pack and the shaft will not contact the disc pack during operation. Tighten one clamp hub socket head cap screw to lock the hub onto the shaft. See the table for the proper tightening torque.

5. Adjust hub separation to dimension "C" specified in the Table and diagram. Tighten Second hub to the shaft.


6. Align the shafts within the limits for parallel and angular misalignment specified on page two. For best alignment results, use a laser alignment tool or dial indicator.

**Note:** Aligning the shafts as closely as possible at the time of initial installation will reduce noise and allow the coupling extra capacity for misalignments and loads which will occur during operation over the life of the connected equipment. Installing and operating coupling at higher degrees of misalignment is possible (see catalog ratings), but will generally reduce the life of the composite disc pack.


Coupling and shaft alignment should be checked periodically due to foundation settling, equipment shifting, etc. Alignment should be re-checked after the first several hours of operation.




**Caution: Rotating equipment is potentially dangerous and should be properly guarded. It is the responsibility of the machine builder, user, or operator to follow all applicable safety codes and provide a suitable guard. Make sure the machine is "locked out" and cannot be accidentally started during installation or maintenance of coupling.**




Axial




Parallel




Angular

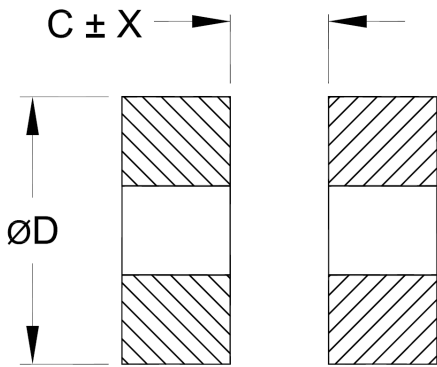

**DIAGRAM 1**  
CHECK HUB SEPARATION

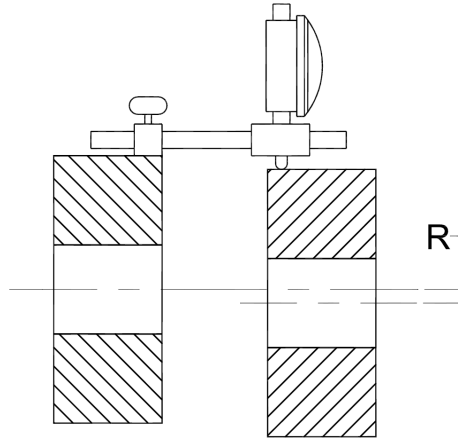

**DIAGRAM 2**  
CHECK PARALLEL MISALIGNMENT

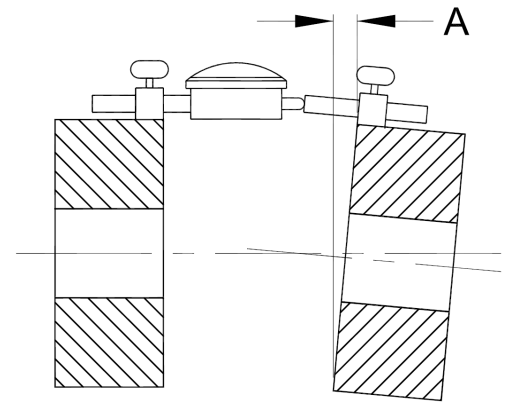

**DIAGRAM 3**  
CHECK ANGULAR MISALIGNMENT

**Table 1**  
**Alignment and Assembly Specifications for Single Flex couplings.**

Model	$C \pm D_{AX}$	$D_{par}$	$A$ or $D_{ang}$		HUB SOCKET HEAD CAP SCREW		DISC PACK SOCKET HEAD CAP SCREW	
	Axial Displacement	Parallel Displacement	Angular Displacement		Tightening Torque		Tightening Torque	
	Inch (mm)	Inch (mm)	Inch (mm)	Angle	Wrench Size		Wrench Size	
6P18-A1C	0.708±0.020 (18.00±0.50)	0.011 (0.28)	0.048 (1.2)	1.34°	5mm	115 in lb (13 Nm)	2.5mm	18 in lb (214 Ncm)
6P22-A1C	0.906±0.024 23.00±0.60	0.014 (0.35)	0.058 (1.4)	1.34°	5mm	115 in lb (13 Nm)	4mm	50 in lb (564 Ncm)
6P26-A1C	0.867±0.030 22.02±0.76	0.014 (0.35)	0.064 (1.6)	1.34°	6mm	283 in lb (32 Nm)	4mm	50 in lb (564 Ncm)
6P30-A1C	1.340±0.034 34.03±0.86	0.022 (0.56)	0.076 (1.9)	1.34°	8mm	43 ft lb (59 Nm)	5mm	95 in lb (10.7 Nm)
6P37-A1C	1.654±0.046 42.01±1.16	0.028 (0.71)	0.092 (2.3)	1.34°	10mm	73 ft lb (99 Nm)	6mm	230 in lb (26 Nm)
6P45-A1C	1.889 ±0.060 47.97±1.52	0.032 (0.81)	0.104 (2.6)	1.34°	14mm	180 ft lb (245 Nm)	8mm	38 ft lb (51 Nm)