


Table of contents

<u>Pg</u>	<u>Description</u>
1	Installation Procedure
2	Assembly Specifications
3	Hub installation Specifications
4	Parts List

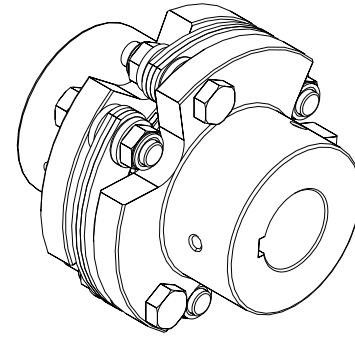

Installation Instructions for Stainless Steel Single flex six bolt Composite Disc Couplings

1. Tools Required:
 - Torque wrench with sockets for coupling hex nuts and hub set screw or clamp collar screw.
 - Open end wrench for coupling hex bolts.
 - Laser alignment tool or Dial indicator (recommended). If not available, a straight edge and feeler gauges.
 - Caliper
2. These instructions are for standard series couplings with normal running conditions. Special couplings may have different instructions or drawings.
3. Inspect hub bores, shafts and keyways making sure there are no burrs. Clean hub bores and shafts. Standard CD coupling clamped and set screw hubs are supplied with slight clearance fit (see catalog). Install hubs on shafts. Place one of the hubs flush with end of shaft. Tighten hub to shaft: If hub is set screw style (Fig 1), see Table 2 on page 3 for proper tightening torque. If installing clamped hub (Fig 2) see assembly details and table on page 3 on page 3.
4. Align the shafts within the limits for parallel and angular misalignment specified in Table 1. See diagrams 2 and 3 for recommended measurement and alignment methods. For best alignment results, use a laser alignment tool or dial indicator. Always rotate the hub on which the indicator is mounted.

Aligning the shafts as closely as possible at the time of initial installation will reduce noise and allow the coupling extra capacity for misalignments and loads which will occur during operation over the life of the connected equipment. Installing and operating the coupling at higher degrees of misalignment is possible (see catalog ratings), but will generally reduce the life of the composite disc pack.

Coupling and shaft alignment should be checked periodically due to foundation settling, equipment shifting, etc. Alignment should be re-checked after the first several hours of operation.

5. Install the disc pack between the hubs. Three bolts connect the disc pack to each hub (6 bolts total). Insert the bolts thru the 3 holes of the first hub that is tightened to the shaft and tighten the locknuts until the disc pack bushings are seated into the hub counter bores.

6. Adjust hub separation to dimension “C” specified in the Table 1 and diagram 1. The disc pack bushings will need to be seated into the second hub counter bores in order to get the proper “C” dimension. If possible, the shafts should not extend beyond the inside hub face. If the shaft extends past the hub face verify there is enough clearance to install the disc pack and also verify the shaft will not contact the disc pack during operation. Tighten second hub to the shaft and re-check angular and parallel misalignment.
7. Install the three bolts connect the disc pack to the second hub. Insert the bolts thru the 3 holes of the second hub and tighten the locknuts until the disc pack bushings are seated into the hub counter bores.
8. Tighten the locknuts per the Table 1 tightening torque specifications. Tighten the locknuts of one hub, then those of the other hub to approximately ½ the stated torque value. Next repeat the process but tightening to the full torque value. It is also recommended to apply torque on the locknut, not the bolt. Re-check and tighten all fasteners after several hours of operation to ensure proper tightening.

***Caution: Rotating equipment is potentially dangerous and should be properly guarded. The user should follow all applicable safety codes and provide a suitable guard.**

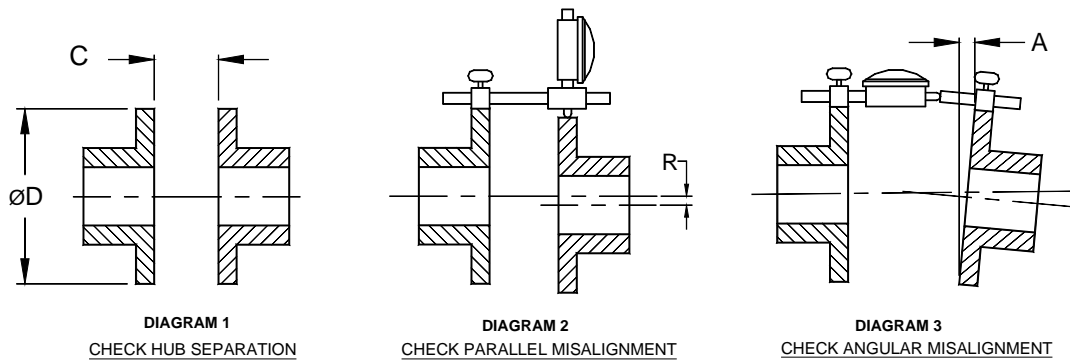


Table 1
Alignment and Assembly Specifications for Stainless Steel Single Flex Series 6Axx-ss

Model	Recommended maximum installed misalignments						Tightening Torque (Dry values)		Unit Outside Diameter Ø D	
	C See Diagram 1		R See Diagram 2		A See Diagram 3					
	Inch	mm	Inch	mm	Inch	mm	Inch	mm		
6A30-SS	0.460±0.017	11.68±0.43	0.003	0.08	0.026	0.66	95 in lb	10.7Nm	3.00	76.2
6A37-SS	0.522±0.023	13.26±0.58	0.004	0.10	0.033	0.83	230 in lb	26 Nm	3.75	95.3
6A45-SS	0.582±0.030	14.78±0.76	0.005	0.13	0.039	1.00	38 ft lb	51 Nm	4.50	114.3
6A52-SS	0.646±0.037	16.41±0.94	0.006	0.15	0.046	1.20	38 ft lb	51 Nm	5.25	133.4

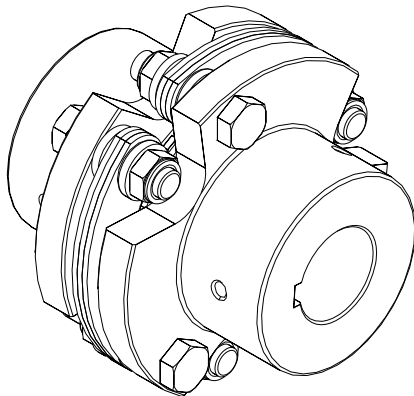


Fig. 1
Set Screw Style Hub

Screw Size	Wrench Size	Torque (in lb)	Torque (Nm)
¼-20unc	0.125	70	7.9
3/8-16unc	0.188	230	26
½-13unc	0.250	500	56
Metric			
M5 x 0.8	2.5mm	28	3.2
M6 x 1.0	3mm	51	5.8
M8 x 1.25	4mm	120	13.6
M10 x 1.50	5mm	230	26

Table 2
Stainless Steel Set Screw Torque Table

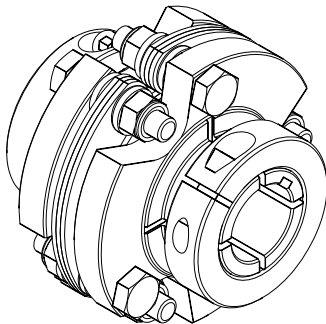


Fig. 2
Clamp Style Hub

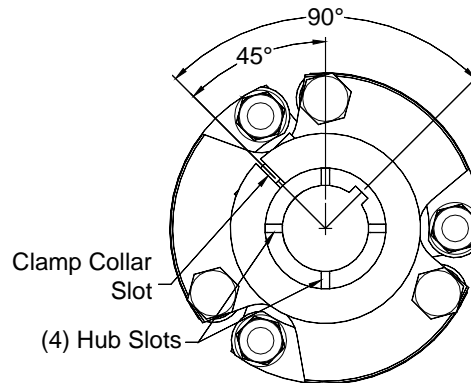


Fig. 3
Clamp Slot Location

Table 3
Stainless Steel Clamp Collar Bolt Torque Table

Clamp bolt Size	Wrench Size	Torque (in lb)	Torque (Nm)
¼-28unf	0.188	110	12.4
5/16-24unf	0.250	195	22
3/8-24unf	0.312	345	39
Metric			
M6 x 1.0	5mm	85	9.6
M8 x 1.25	6mm	195	22

Clamp Hub Assembly

Before tightening the clamp collar screw(s), orient the clamp collar slot (see Fig. 3) 90 degrees from the keyway centerline. If there is no keyway orient the clamp collar slot 45 degrees from one of the hub slots (see Fig. 3)

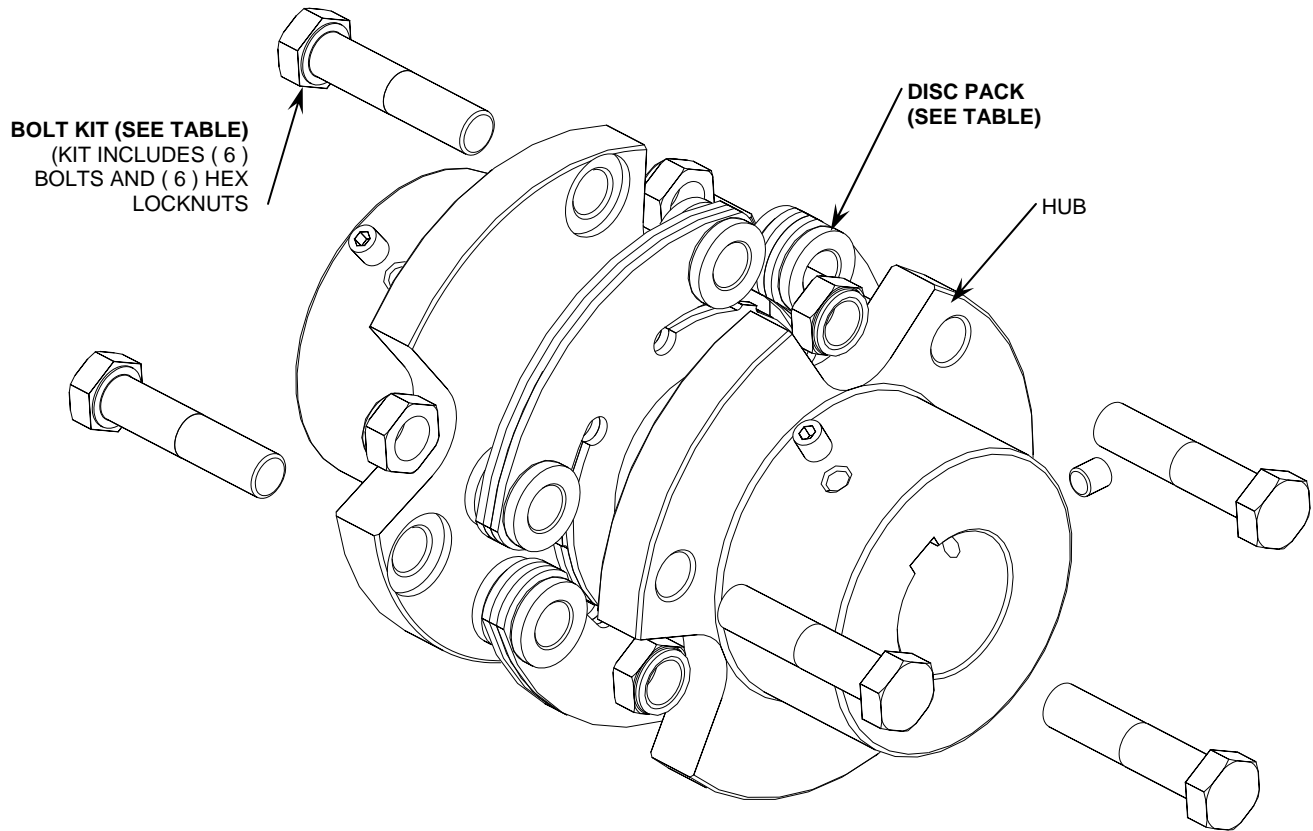


Fig. 5

Table 4
Replacement Parts

Model	Hub OD (inch)	Disc Pack		Bolt Kit	
		Qty	Part No	Qty	Part No
6A30-SS	3.00	1	A030020	1	A030150
6A37-SS	3.75	1	A037001	1	A037150
6A45-SS	4.50	1	A045001	1	A045150
6A52-SS	5.25	1	A052001	1	A052150